


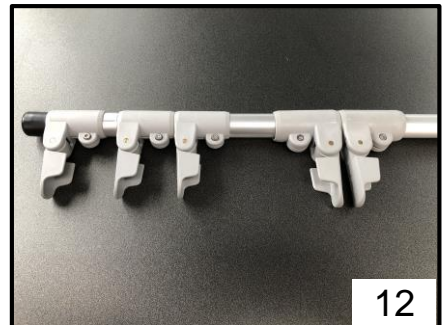
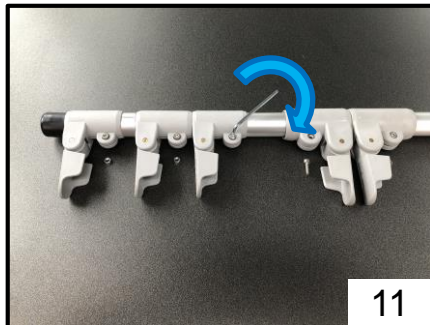
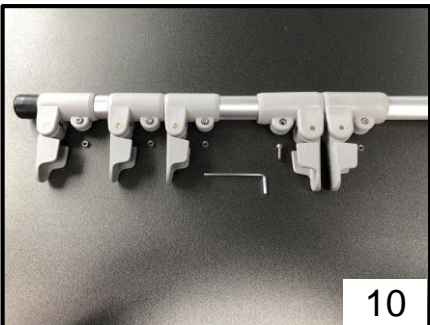
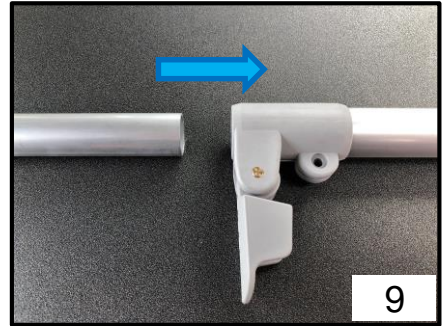
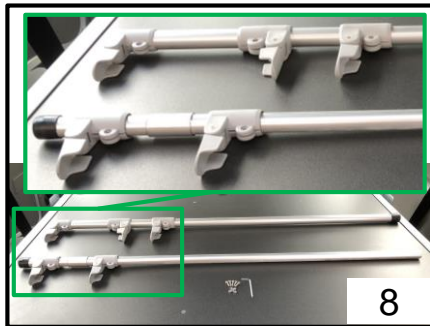
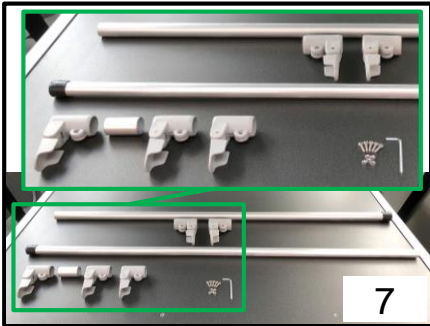
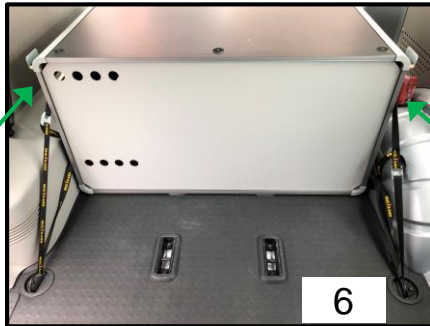
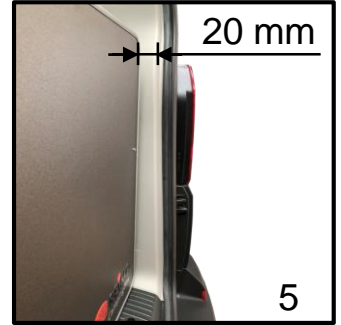
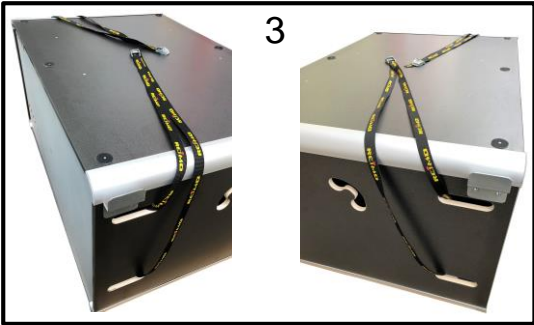
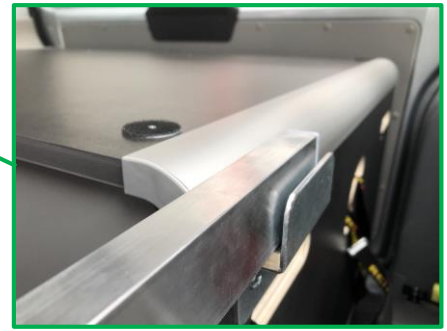
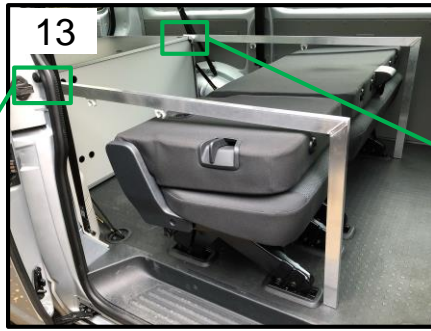
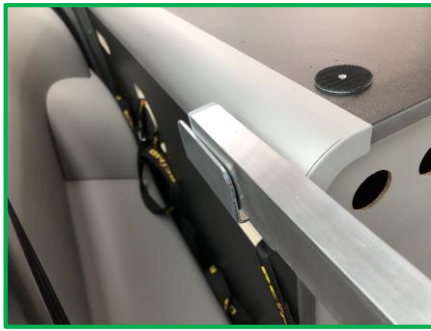
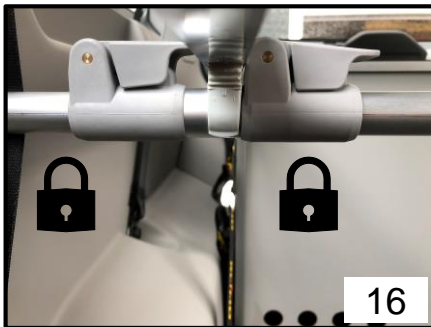


Campingbox L 13250, Installation in VW T6

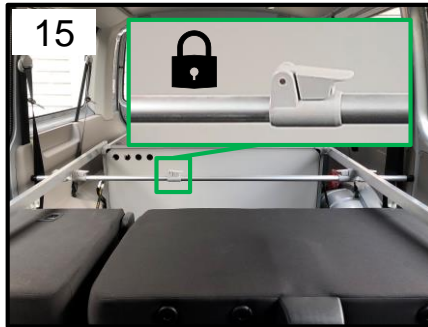


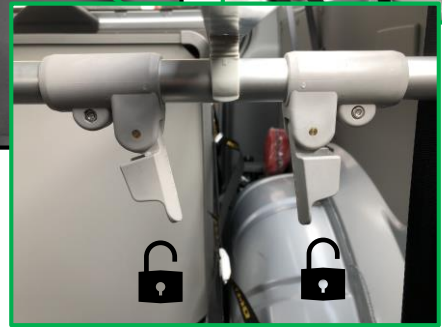

14

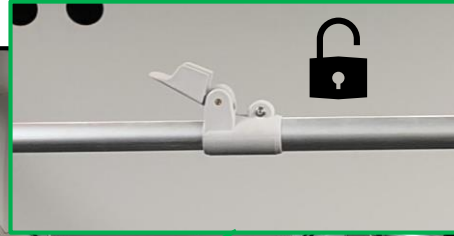

16

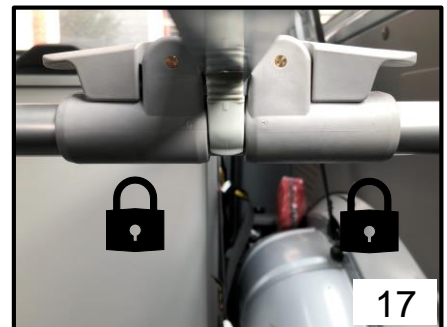

17



18



19



20



21